


TC NO. 0 543EG

RA-3141CL

TECHNICAL INFORMATION TECHNISCHE INFORMATION

REFER TO THE FOUNDATION MANUAL BEACHTEN SIE BITTE RAUMKLIMAGERÄTE-HANDBUCH

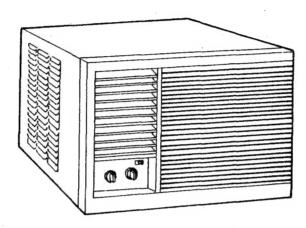

SPECIFICATIONS SPEZIFIKATIONEN

TYPE		WINDOW TYPE		
T YP		WINDEIBAU		
MODEL MODELL		RA-3141CL		
COLOR LIGHT GRAY FARBE HELLGRAU				
POWER SOURCE STROMANZEIGE		1ø 220 - 240 V 50 Hz		
TOTAL INPUT LEISTUNGSAUFNAHME	(W)	1,480		
TOTAL AMPERES STROMAUFNAHME	(A)	6.7		
COOLING CAPACITY	(kW)	3.66		
KUHLLEISTUNG	(B.T.U/h)	12,500		
	W, BREITE	660		
DIMENSIONS ABMESSUNGEN (mm)	н, ноне	424		
	D, TIEFE	760		
NET WEIGHT (kg)		65		

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT ÄNDERUNGEN UND LIEFERMÖGLICHKEITEN VORBEHALTEN

ROOM AIR CONDITIONER

MARCH 1989 **TOCHIGI WORKS**

SAFETY DURING REPAIR WORK

- In order to disassenble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.
- 2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

- After completion of repairs, the initial state should be restored.
- 4. Lead wires should be connected and laid as in the initial state.
- Modification of the unit by user himself should absolutely be prohibeted.
- Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
- 7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
- 8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be lMΩ or more as measured by a 500V DC megger.
- 9. The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again.
 If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
- Any inflammable thing should never be placed about the location of installation.
- 11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.

SICHERHEIT BEI REPARATURARBEITEN

- Vergessen Sie beim Ausbau oder bei der Reparatur des betreffenden Geräts nicht, vor Beginn der Arbeit den Stecker des Stromkabels aus der Netzsteckdose zu ziehen.
- 2. Falls Teile ersetzt weden müssen, sollten ausschließlich passende, für das betreffende Gerät bestimmte Ersatzteile verwendet werden und nach den Vorschriften im Service-Handbuch sachgemäß eingebaut werden.
- Nach Abschluß der Reparaturarbeiten ist das Gerät wieder in den ursprünglichen Zustand zu bringen.
- 4. Leitungsdrähte sind anzuschließen und wie vor der Reparatur zu verlegen.
- Der Besitzer sollte unter keinen Umständen selber Änderungen am Gerät vornehmen.
- Werkzeuge und Meßgeräte, die bei Reparaturen oder Inspektionen verwendet werden, sollten im voraus genau geeicht werden.
- 7. Beim Wiedereinbau des reparierten Geräts ist vorsichtig umzugehen, um Unfälle wie elektrischen Schlag, Stromableitung oder Verletzungen durch herunterfallende Teile zu vermeiden.
- 8. Zur Prüfung der Isolierung des Geräts ist der Isolierwiderstand zwischen dem Stecker des Stromkabels und der Erdungsklemme des Geräts zu messen. Der Isolierwiderstand, gemessen mit einem 500V Gleichstrom-Megohmmeter, sollte mindestens 1 MΩ betragen.
- 9. Der ursprüngliche Installationsort, z.B. Fenster, Boden oder sonstige Stellen, ist darauf zu prüfen, ob er das reparierte Gerät wieder sicher aufnehmen kann. Falls er sich als nicht fest und sicher genug erweist, sollte das Gerät entweder mit zusätzlicher Verstärkung am ursprünglichen Ort oder an einem neuen Ort installiert werden.
- 10. In der Nähe des Installationsorts sollten keinerlei brennbare Gegenstände abgestellt werden.
- ll. Prüfen Sie, ob das Gerät ordnungsgemäß geerdet ist. Falls die Erdung unvollständig ist, schließen Sie die Erdungsklemme richtig an Erde an.

SPECIFICATIONS

BESCHREIBUNG

MODELL MODELL	RA-3141CL	
OPERATION SWITCH BETRIEBSSCHALTER	SRIM	
THERMOSTAT THERMOSTAT	FT61G1	
DAMPER LEVER LUFTKNOPF	YES JA	
FAN MOTOR VENTILATORMOTOR	35 W	
FAN MOTOR CAPACITOR KONDENSATOR DES VENTILATORMOTOR	4 µF 400 V	
FAN MOTOR PROTECTOR VENTILATORMOTORBESCHÜTZER	YES JA	
COMPRESSOR KOMPRESSOR	WAll3AX	
OVERLOAD RELAY UBERLASTUNGSRELAIS	YES (INTERNAL) JA (INNERE)	
FUSE CAPACITY SCHMELZSICHERUNG	15A TIME DELAY FUSE 15A TRÄGE AUSFÜHRUNG	
REFRIGERANT CHARGING VOLUME KÜHLMITTEL MENGE	750 g	

AT THE INSTALLATION

- 1. Remove the spacers under the compressor or inserted around the compressor. If not, the noise and vibration will occur.
- 2. Make rear side of the unit 3/16" \sim 3/8" lower so that drain water flows out smoothly.
- 3. After sliding the unit into the cabinet, fasten the front cover with screw removed from the rear side of the cabinet as floows.

BEI DER INSTALLATION

- Abstandhalter, die sich auf der unteren seite des verdichters befinden oder um den verdichter eingesteckt sind, entfernen.
 Sonst kann das geräusch oder die vibration auftreten.
- 2. Hintere seite der einheit um 3/16" $\sim 3/8$ " tiefer machen, damit das abwasser harmlos fließt.
- 3. Die einheit in den schrank einschieben und danach die vordere abdeckung mit der schraube befestigen, die von der hinteren seite des schranks wie im unteren bild dargestellt abgenommen wurde.

AT SERVICE


WHEN YOU DETACH THE FRONT COVER

- 1. Remove the air filter from the front cover by pulling leftward first.
- 2. Remove the screw which fastens the front cover.

BEIM BETRIEB


WENN DIE VORDERE ABDECKUNG ENTFERNT WIRD:

- 1. Luftfilter zuerst nach links ziehen und von der vorderen abdeckung entfernen.
- 2. Schraube lösen, die vordere abdeckung befestight.

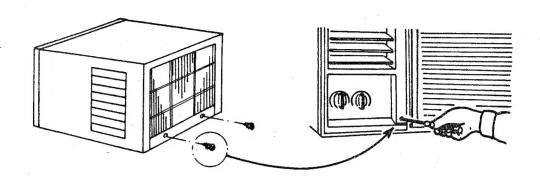

CONSTRUCTION AND DIMENSIONAL DIAGRAM

KONSTRUKTION UND ABMESSUNGEN

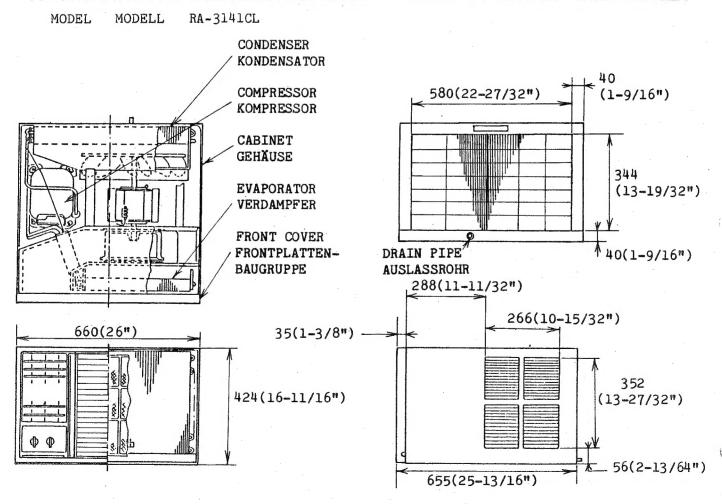

MAIN PARTS COMPONENT

HAUPTBAUTEILE

THERMOSTAT

Thermostat Specifications

THERMOSTAT

Augaben über den Thermostat

MODEL	MODELL		RA-3141CL
THERMOSTAT MODEL	THERMOSTAT MODELL		FT61G1
TEMPERATURE TEMPERATUR °C (°F)		ON AN	30 (86)
	*	OFF AU	S 27.5 (81.5)
		ON AN	24 (75)
	*	OFF AU	S 21 (70)
		ON AN	18 (64)
		OFF AU	S 14.5 (58)

FAN MOTOR

Fan Motor Specifications

VENTILATORMOTOR

Angaben über den Ventilatormotor

G.		
G		
220 - 240 V		
50 Hz		
WHITE WEISS BLUE BLAU		
16.0		
33.0		
19.4		
40.1		


COMPRESSOR

KOMPRESSOR

Compressor Motor Specifications

Angaben über den Kompressormotors

MODEL MO	DDELL	RA-3141CL	
COMPRESSOR MODEL KO	OMPRESSOR MODELL	WA113AX	
PHASE PH	HASEN	SINGLE EINPHASIG	
RATED VOLTAGE NE	ENNSPANNUNG	220 - 240 V	
RATED FREQUENCY NE	ENNFREQUENZ	50 Hz	
LOCKED ROTOR CURRENT AM	NLAUFSTROM	32 A	
POLE NUMBER AN	2		
CONNECTION SCHALTVERBINDUNG		INTERNAL OVERLOAD WHITE RELAY INNEREUBERLASTUNGS-RELAIS ORANGE ORANGE RM CAPACITOR RED ROT	
RESISTANCE VALUE WIDERSTANDS WERT (Ω)	20°C	RM = 2.347	
	(68°F)	RA = 3.604	
	75°C (167°F)	RM = 2.854 RA = 4.382	
	(10) E)	NA = 4.302	

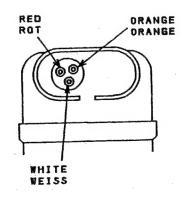

WIRING DIAGRAM

SCHALTSCHEMA

MODEL

MODELL

RA-3141CL

COMPRESSOR KOMPRESSOR

FAN MOTOR VENTILATORMOTOR

© : OPERATION SWITCH BETRIEBSSCHALTER

THERMOSTAT THERMOSTAT

 $\textcircled{G}: \begin{subarray}{ll} 35\,\mu\mbox{F} & \mbox{CAPACITOR} \\ 35\,\mu\mbox{F} & \mbox{KONDENSATOR} \end{subarray}$

BLU: BLUE BLAU

GRY: GRAY

YEL: YELLOW GELB

BROWN BRAUN

(K): LINE CORD NETZKABEL

. 4μF CAPACITOR 4μF KONDENSATOR

TERMINAL BOARD KLEMMLEISTE

FAN MOTOR PROTECTOR VENTILATORMOTORBESCHUTZER

WHT: WHITE WEISS

ORANGE ORANGE


GREEN GRN: **GRUN**


RED ROT RED:


BLK: BLACK SCHWARZ

PNK: PINK ROSA

VIO: VIOLETTE

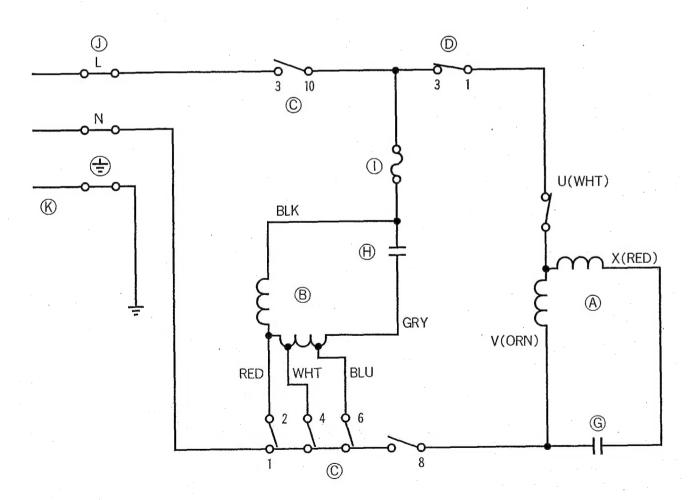

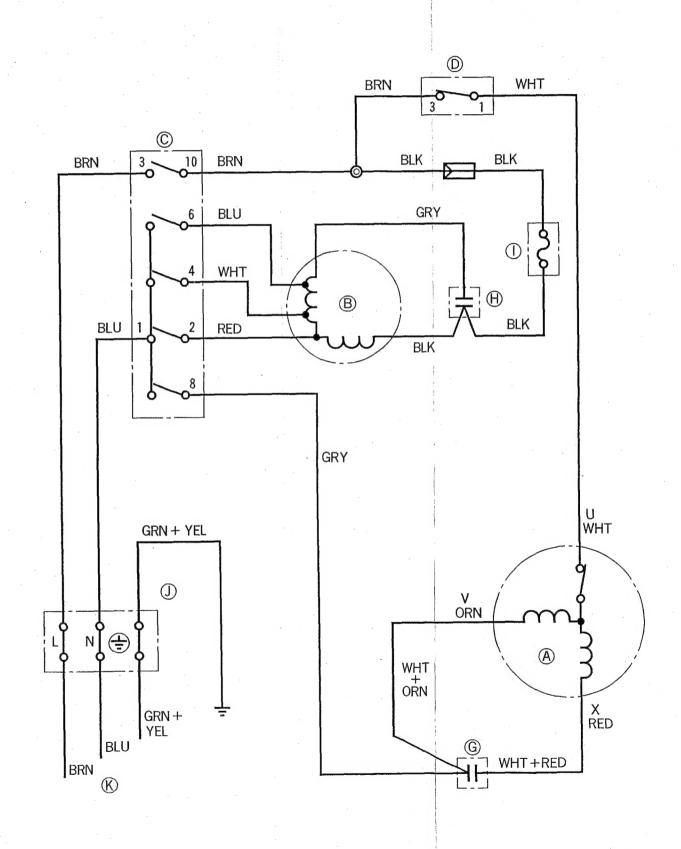

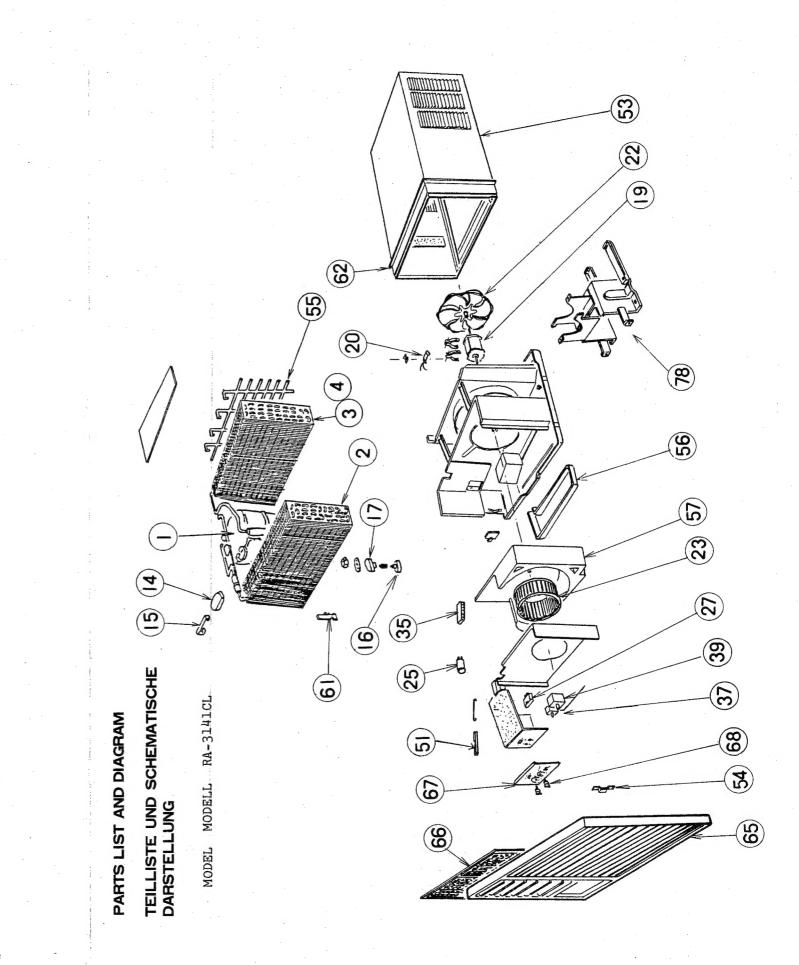

MODEL MODELL RA-3141CL

NO.	PARTS NO. AUFTRAGSNUM RA-3141CL		Q'TY/ UNIT MENGE/ STÜCK	PARTS NAME	TEILEBEZEICHNUNG
1	RA-2148C	901	1	COMPRESSOR 1100W,22kg KOMPRESSOR 1100W,22kg	
2	RA-2143CL	906	1	EVAPORATOR	VERDAMPFER
3	RA-2143CL	905	1	CONDENSER	KONDENSATOR
4	RA-2140JP	908	1	STRAINER	FILTER
14	RA-226	015	1	TERMINAL COVER	KABELSCHUTZDECKEL
15	RA-2143CP	902	1	COVER SUPPORT	DECKELABSTUTZUNG
16	RA-184B	919	4	COMPRESSOR RUBBER (A)	KOMPRESSORGUMMI (A)
17	RA-144B	904	4	COMPRESSOR RUBBER (B)	KOMPRESSORGUMMI (B)
19	RA-2143CL	904	1	FAN MOTOR 35W, 4kg	VENTILATORMOTOR 100W, 6kg
20	RA-2289CP	908	1	FAN MOTOR PROTECTOR	VENTILATORMOTORBESCHÜTZER
22	RA-2289CP	907	1	PROPELLER FAN	PROPELLER-VENTILATOR
23	RA-2180JEP	904	1	SIROCCO FAN	SCHIROKKO-VENTILATOR
25	RAC-4520BHV	007	1	CAPACITOR 35µF, 400V	KOMPRESSORKONDENSATOR
27	RAC-5650THV	009	1	CAPACITOR 4µF, 400V	VENTILATORMOTORKONDENSATOR
37	RAP-189	007	1	SWITCH (SRIM)	BETRIEBSSCHALTER (SRIM)
39	RA-2259B	905	1	THERMOSTAT (FT61G1)	THERMOSTAT (FT61G1)
51	RA-2288CP	910	1	DAMPER LEVER	LUFTKNOPF
53	RA-2251CH	901	1	CABINET	GEHÄUSE
54	RA-2181B	905	1	STOPPER	ARRETIERUNG
55	RA-2140JP	903	1	REAR GRILL	RÜCKENGITTER
56	RA-2289CP	904	1	EVAPORATOR PAN	VERDAMPFERPFANNE
57	RA-2181GL	905	1	CASING	VENTILATORGEHÄUSE
61	RAS-2149C	910	1	BULB SUPPORT	HALTER FÜR TEMPERATURFÜHLER
62	RA-2180B	902	1	GASKET	ABDICHTUNG
65	RA-3141CL	901	1	FRONT COVER (LG)	FRONTPLATTE (LG)
66	RA-3181G	904	1	FILTER	LUFTFILTER
67	RA-3141CL	902	1	CONTROL PANEL	BEDIENUNGSPLATTE
68	RA-3181G	902	2	DIAL	SKALA
78	RA-2143CL	903	1	FAN MOTOR BASE	VENTILATORMOTOR GESTELL
, -					



WEST GERMANY

HITACHI SALES EUROPA GmbH

Rungedamm 2, 2050 Hamburg 80, W. Germany Tel: (040) 734110

SWITZERLAND

HITACHI SALES A.G.

Bahnhofstrasse, 19, 5600 Lenzburg, Switzerland Tel: (064) 513621

ENGLAND

HITACHI SALES (U.K.) LTD.

Hitachi House, Station Road, Hayes, Middlesex UB3 4DR, England Tel: 01 (848) 8787

FRANCE

HITACHI FRANCE (RADIO-T.V. ELECTRO-MENAGER) S.A.

95-101 Rue Charles-Michels 93200 Saint-Denis, France Tel: 1-48-21-60-15

PANAMA

HITACHI SALES CORPORATION DE PANAMA S.A. INTERNATIONAL HITACHI SALES PANAMA, LTD., S.A.

PRODUCTOS HITACHI S.A.

Apartado 7657 Panamá 5, Panamá City, Rep. of Panamá Tel: (61) 3100, (61) 4305

COSTA RICA

HITACHI SALES CENTROAMERICANA S.A.

HITACHI ELECTRONICA CENTROAMERICANA, S.A.

San Rafael de Escazú, (Apartado 10272-10000) San José, Costa Rica Tel : (28) 2011, (28) 0037

MOROCCO

HITACHI PRODUCTIONS MAROC ELECTRONIQUES DOMESTIQUES S.A.

Rue du Havre, Casablanca, Morocco Tel : 30-73-68, 30-73-57

CANARY ISLANDS

HITACHI CANARIAS S.A.

Calle San-Francisco No. 19, 38002 Santa Cruz de Tenerife Canary Islands Tel : 9-22-246498

KUWAIT

Kuwait Office

P.O.Box. 23504, Safat, Code 13096-Kuwait Tel: 2463763

GREECE

HITACHI SALES (HELLAS) S.A.

110 Syngrou St., Athens, Greece Tel: 9219082, 9233469

SINGAPORE

HITACHI (SINGAPORE) PTE. LTD.

18, Pasir Panjang Road #01-03 PSA Multi-storey Complex, Singapore 0511, Singapore Tel: 2738102

MALAYSIA

HITACHI SALES (MALAYSIA) SDN. BHD.

Wisma Hitachi, No.2, Lorong 13/6A, 46200 Pataling Jaya, Salangor, Malaysia Tel: 7573455

INDONESIA

Indonesia Office

C/O P.T. Dinamika Ardimas JL. Matraman Raya No. 10, Jakarta 13150, Indonesia Tel: 8580430, 8581641

THAILAND

HITACHI SALES (THAILAND) LTD.

2240-46, New Petchburi Road, Bangkapi, Hueykuang, Bangkok, Thailand Tel: 2-314-2741

AUSTRALIA

HITACHI SALES'AUSTRALIA PTY., LTD.

Headquarters, Victoria: 153 Keys Road, Moorabbin, Vic. 3189, Australia Tel: 555-8722

HONG KONG

HITACHI (HONG KONG) LTD.

8th Floor, Park-In Commercial Centre No. 56 Dundas St., Kowloon, Hong Kong

HITACHI ELECTRIC SERVICE CO., (HONG KONG) LTD.

4th Floor, Luen Tai Industrial Bldg., 72-76 Kwai Cheong Road, Kwai Chung, N. T., Hong Kong Tel: 0-4240126, 4204101

HITACHI ELESONIC (CHINA), LTD.

8th Floor, Cheung Lee Commercial Bldg., No.25 Kimberley Road. Tsimshatsui, Kowloon, Hong Kong Tel: 3-7215351~60

RA-3141CL

TC NO. 0543EG

Printed in Japan (S-HEC)




TC NO.0543EG-1

RA-3141CL

SUPPLEMENT **NACHTRAG**

REFER TO SERVICE MANUAL (TC NO.0543EG) SIEHE WARTUNGSHANDBUCH (TC-NR.0543EG)

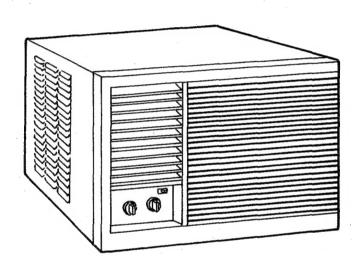

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT ÄNDERUNGEN UND LIEFERMÖGLICHKEITEN VORBEHALTEN

ROOM AIR CONDITIONER

SEPTEMBER 1990

TOCHIGI WORKS

SAFETY DURING REPAIR WORK

- In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.
- If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

- 3. After completion of repairs, the initial state should be restored.
- Lead wires should be connected and laid as in the initial state.
- Modification of the unit by user himself should absolutely be prohibeted.
- Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
- 7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
- 8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be $1 \text{M}\Omega$ or more as measured by a 500V DC megger.
- 9. The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again.
 If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
- Any inflammable thing should never be placed about the location of installation.
- Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.

SICHERHEIT BEI REPARATURARBEITEN

- Vergessen Sie beim Ausbau oder bei der Reparatur des betreffenden Geräts nicht, vor Beginn der Arbeit den Stecker des Stromkabels aus der Netzsteckdose zu ziehen.
- Falls Teile ersetzt weden müssen, sollten ausschließlich passende, für das betreffende Gerät bestimmte Ersatzteile verwendet werden und nach den Vorschriften im Service-Handbuch sachgemäß eingebaut werden.
- Nach Abschluß der Reparaturarbeiten ist das Gerät wieder in den ursprünglichen Zustand zu bringen.
- Leitungsdrähte sind anzuschließen und wie vor der Reparatur zu verlegen.
- Der Besitzer sollte unter keinen Umständen selber Änderungen am Gerät vornehmen.
- Werkzeuge und Meßgeräte, die bei Reparaturen oder Inspektionen verwendet werden, sollten im voraus genau geeicht werden.
- Beim Wiedereinbau des reparierten Geräts ist vorsichtig umzugehen, um Unfälle wie elektrischen Schlag, Stromableitung oder Verletzungen durch herunterfallende Teile zu vermeiden.
- 8. Zur Prüfung der Isolierung des Geräts ist der Isolierwiderstand zwischen dem Stecker des Stromkabels und der Erdungsklemme des Geräts zu messen. Der Isolierwiderstand, gemessen mit einem 500V Gleichstrom-Megohmmeter, sollte mindestens 1 M Ω betragen.
- 9. Der ursprüngliche Installationsort, z.B. Fenster, Boden oder sonstige Stellen, ist darauf zu prüfen, ob er das reparierte Gerät wieder sicher aufnehmen kann. Falls er sich als nicht fest und sicher genug erweist, sollte das Gerät entweder mit zusätzlicher Verstärkung am ursprünglichen Ort oder an einem neuen Ort installiert werden.
- In der Nähe des Installationsorts sollten keinerlei brennbare Gegenstände abgestellt werden.
- Prüfen Sie, ob das Gerät ordnungsgemäß geerdet ist. Falls die Erdung unvollständig ist, schließen Sie die Erdungsklemme richtig an Erde an.

MAIN PARTS COMPONENT

HAUPTBAUTEILE

THERMOSTAT

THERMOSTAT

Thermostat Specifications

Augaben über den Thermostat

MODEL MODELL THERMOSTAT MODEL THERMOSTAT MODELL			RA-3141CL	
			FT61G1	3ART17
		ON AN	30 (86)	32 (89.5)
MATERIAL A MATERIAL		OFF AUS	27.5 (81.5)	29 (84)
TEMPERATURE TEMPERATUR		ON AN	24 (75)	25.5 (78)
		OFF AUS	21 (70)	22.5 (72.5)
°C (°F)		ON AN	18 (64.5)	18 (64.5)
		OFF AUS	14.5 (58)	14.5 (58)

THERMO	STAT MODEL STAT MODELL MODEL MODELL	FT61G1	3ART17
EFFECTIVE AS FROM (SERIAL NO.) WIRKSAM AB (SERIENNUMMER)	RA-3141CL	486158~486357 137631~137830 372803~373702 459183~459582	FROM PRODUCTIONS SEPTEMBER 1990. AB PRODUKTION SEPTEMBER 1990.
INTERCHANGEABILITY AUSTAUSCHBARKEIT		FT61G1 < →3ART17	

WIRING DIAGRAM

MODEL MODELL **SCHALTSCHEMA**

 $\label{eq:hammonic} \begin{array}{l} \text{$(\mbox{$H$})$} : {^4\mu}{^{\mbox{μ}}} \; {^{\mbox{$CAPACITOR}}} \\ {^4\mu}{^{\mbox{$KONDENSATOR}}} \end{array}$

TERMINAL BOARD KLEMMLEISTE

LINE CORD NETZKABEL

. FAN MOTOR PROTECTOR VENTILATORMOTORBESCHUTZER

RA-3141CL

- COMPRESSOR KOMPRESSOR
- FAN MOTOR VENTILATORMOTOR
- OPERATION SWITCH BETRIEBSSCHALTER
- THERMOSTAT THERMOSTAT
- 35 μF CAPACITOR 35 μF KONDENSATOR

GRAY GRAU

BLUE BLAU BLU:


GRY:

BLK:

- YEL: YELLOW GELB
- ORN: ORANGE ORANGE
- BLACK SCHWARZ PNK: PINK ROSA
- **BROWN** BRN: **BRAUN**
 - GREEN GRUN
- RED : RED ROT

WHT: WHITE WEISS

VIO: VIOLETTE

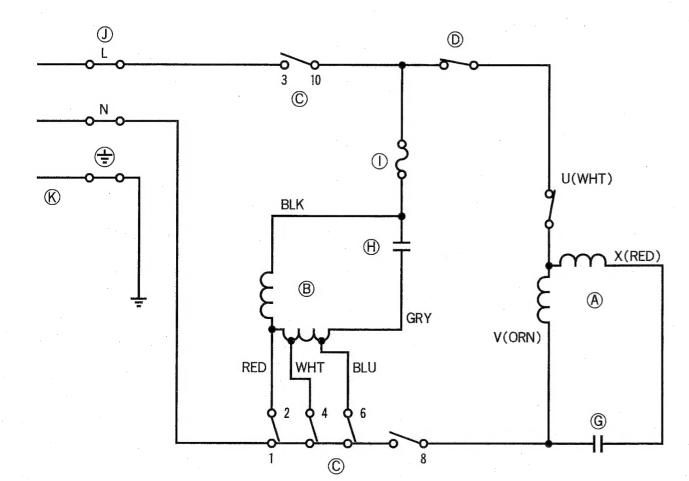

Suppl.

